




INSTALLATION

ATTENTION: Power Draw = 0.2 amp.

- 1 DISCONNECT your vehicle's negative (-) battery cable.
- 2 MOUNT your gauge to the panel using the spin lock ring.
- 3 CONNECT the gauge wiring.
- 4 RECONNECT your vehicle's negative (-) battery cable.

WHITE: +12v Dash Lighting
(Lighting)
BLACK: Ground
RED: +12v Accessory Power
(Main Gauge Power)

WHITE: Fuel Sensor Signal
BLACK: Fuel Sensor Ground
OR Chassis Ground
Note: For best accuracy, make
sure the sensor ground and gauge
ground are common with each
other.

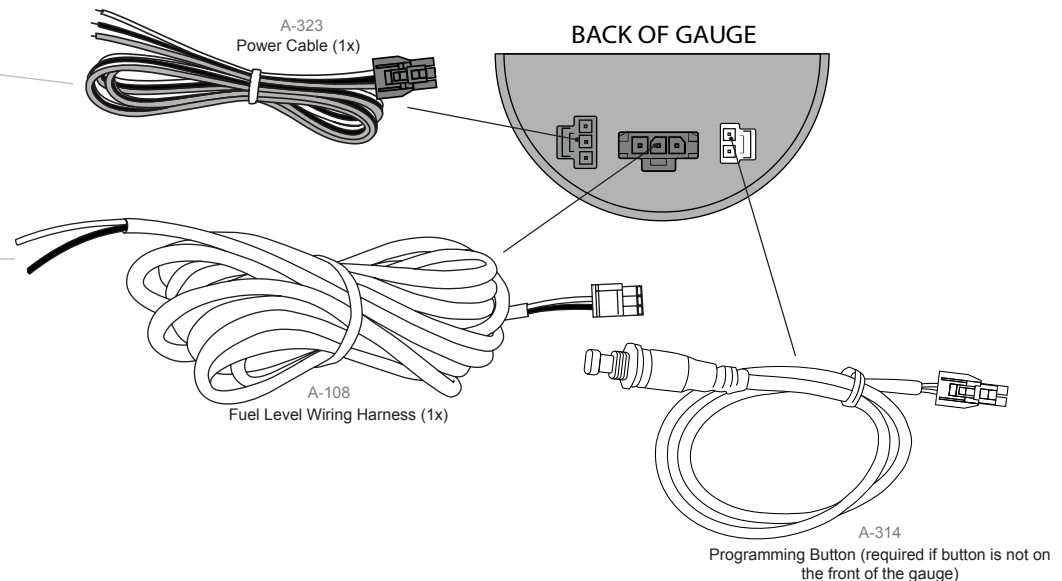

SETTING WARNING LIGHT
(Optional Feature)

The warning LED can be set to turn on for a low condition. Setting will be retained even when powered off.

- 1 With NO power to the gauge, PRESS and HOLD the button.
- 2 While HOLDING the button, power the gauge on. When the warning light turns on, release the button. Pointer will slowly move clockwise from gauge min. value.
- 3 PRESS the button at desired low warning set point. LED light will BLINK to indicate low warning has been set. (Pressing button at min. value will turn low LED warning OFF.)

SETTING LED BRIGHTNESS
(Optional Feature)

ATTENTION: 1) Setting LED brightness while gauge lighting is OFF will set DAY LED brightness. 2) Setting LED brightness while gauge lighting is ON will set NIGHT LED brightness.

- 1 POWER gauge ON.
 - 2 QUICK PRESS the button. LED will light up at current brightness setting.
 - 3 PRESS the button to toggle through LED brightness options. After a small delay, LED light will BLINK to indicate setting has been saved.
- (Off) 0 - 1 - 2 - 3 - 4 (Most Bright)

CONTACT US

Support@Speedhut.com
801-221-1460 (9a-4p MST)
FAQ - Speedhut.com/faq.i
www.Speedhut.com



CALIBRATION - Preset or Manual

ATTENTION: Calibration is **REQUIRED**. The fuel level gauge **WILL NOT** operate correctly until calibrated to vehicle's fuel level sender.

- 1 DETERMINE your vehicle's ohm range.
- 2 If your ohm range is listed on the chart or diagram, proceed to preset calibration.
- 3 If available presets do not fit your application, proceed to manual calibration.

PRESET CALIBRATION

- 1 POWER gauge ON.
- 2 ENTER calibration mode by holding button down for 10-12 sec until pointer points at 1/8 tank.
- 3 PRESS button to toggle through preset options until pointer is at desired ohm range (figure 2).
- 4 PRESS AND HOLD button for 2 sec to save preset. Pointer will point at 'E' and then begin displaying current fuel level.

Empty	Full	Vehicle Application
240 ohms	33 ohms	Speedhut factory default. Use with Speedhut A-300 sender.
70 ohms	10 ohms	Most pre-'87 Fords & most Chrysler
0 ohms	30 ohms	Most pre-'65 GM
0 ohms	90 ohms	Most GM '65-present
16 ohms	158 ohms	Most Fords '87-present

Figure 1. Preset ohm Ranges

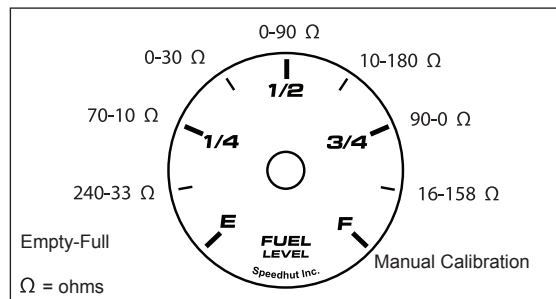


Figure 2. Calibration Presets

MANUAL CALIBRATION

ATTENTION: 1) Both empty and full conditions **MUST** be calibrated before gauge will accurately display fuel level. 2) Fuel level sender **MUST** be connected to gauge during manual calibration. 3) Either condition can be calibrated first.

- 1 POWER gauge ON.
- 2 ENTER calibration mode by holding button down for 10-12 sec until pointer points at 1/8 tank.
- 3 PRESS button to toggle through preset options until pointer is pointing at 'F' (figure 2).
- 4 PRESS AND HOLD button for 2 sec to enter manual calibration mode. The pointer will oscillate between 'E' and 'F'.

Calibrating Empty Condition

ATTENTION: 1) If fuel sender is currently installed in your fuel tank--the tank **MUST** be empty to calibrate empty condition. 2) If fuel sender is **NOT** currently installed in your fuel tank--the fuel sender **MUST** be in "empty" position to calibrate empty condition.

- 1 When pointer points at 'E', press and hold button for 2 sec to save preset.

Gauge will exit calibration menu and attempt to display current fuel level.

Calibrating Full Condition

ATTENTION: 1) If fuel sender is currently installed in your fuel tank--the tank **MUST** be full to calibrate full condition. 2) If fuel sender is **NOT** currently installed in your fuel tank--the fuel sender **MUST** be in "full" position to calibrate full condition.

- 1 When pointer points at 'F', press and hold button for 2 sec to save preset.

Gauge will exit calibration menu and attempt to display current fuel level.

LIFETIME WARRANTY

We take pride in the products we make and offer a Lifetime Warranty on gauge electronics and a 5-year warranty on hardware for every gauge, tachometer and shift light purchased since Jan 1, 2006. Every SPEEDHUT product is built for a lifetime of service, and we warrant to the person who originally purchased the product that all SPEEDHUT products will be free from defects in workmanship and materials for their applicable warranty period. If a defect occurs during the warranty period as the result of the product's intended use, we will repair or replace the defective product or part, to our discretion. The warranty does not cover defects caused by third-party modifications, repairs or replacement parts. Any holes, scratches, normal wear and tear, and the natural breakdown of colors and materials over extended time and use are not warranted.



Scan Me

How To Test Your Fuel Level Sensor.

<https://bit.ly/32igY Ae>



Scan Me

How To Calibrate Your Fuel Level Gauge To Any Fuel Sensor.

<https://bit.ly/3vHORYW>